Ethernet Network Connection - (Optional)

See “Making Connections” Step 2 for the IntelFlex Desktop Controller and your User Manual for more information.

Using DHCP

- The default network configuration for the IntelFlex Desktop is “DHCP”.
- After the IntelFlex Controller displays the “Enter Pager Number” it will ping the Network DHCP Controller and will automatically assign the network address to the IntelFlex Controller.
- If no Network DHCP Controller exists, IntelFlex will still operate normally, but will not be accessible via the web interface.

Using a Static IP Address

After the IntelFlex Controller displays Enter Pager Number, the IP address can be viewed or Set a Static IP Address, please consult the User Manual for detailed information.

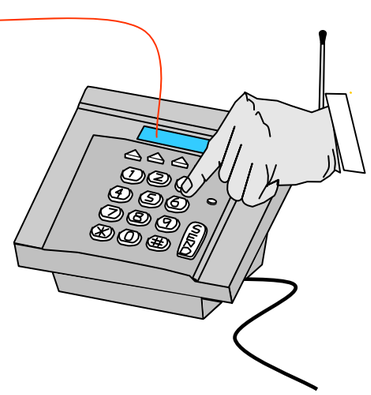

It is recommended that you record and save the Static IP address information as it is needed for system changes or for JTECH remote support.

If needed, contact JTECH Customer Care for additional information or support about making and saving configuration changes via the web interface.

Thank you for your selection of a JTECH IntelFlex™ paging system.

If you are happy with your JTECH system, tell a friend.

If you’re unhappy with your system in any way, please tell us.
Our goal is to achieve 100% Customer Satisfaction.

Please contact us if we may answer any questions or address any concerns.

For immediate service, call JTECH Customer Care at 800-321-6221, option 6.

JTECH COMMUNICATIONS, INC.
800-321-6221
www.jtech.com

JTECH Communications, Inc.
6413 Congress Avenue, Suite 150
Boca Raton, Florida 33487

JTECH P/N 321040
© 2012

IntelFlex Desktop

Quick Set Up Guide

It’s Easy as 1-2-3!

JTECH COMMUNICATIONS, INC.

IntelFlex… It's as Easy as 1, 2, 3!

Paging JTECH Pagers
From the IntelFlex Controller keypad, simply enter the pager number and press SEND.

IntelFlex™ Desktop Controller

1

SYSTEM CONFIGURATION. If configured with 2 or more modules, a System Setup sheet will be included with your equipment. Use this sheet as a guide to properly connect the peripheral devices to the IntelFlex Desktop Controller. Slot positions are marked on the side of the Controller as shown below. (Systems shipments with 0 or 1 modules will not include this configuration sheet.)

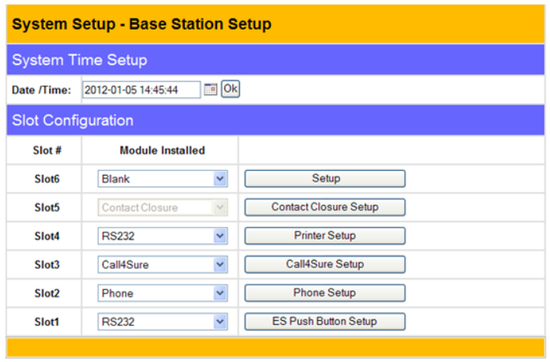
System Setup - Base Station Setup
System Time Setup
Date /Time: 2012-01-05 14:45:44 Ok
Slot Configuration
Slot # | Module Installed
Slot6 | Blank | Setup
Slot5 | Contact Closure | Contact Closure Setup
Slot4 | RS232 | Printer Setup
Slot3 | Call4Sure | Call4Sure Setup
Slot2 | Phone | Phone Setup
Slot1 | RS232 | ES Push Button Setup

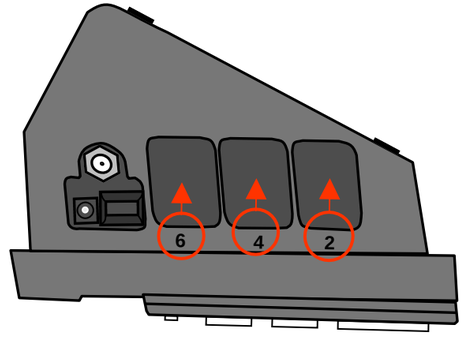

2

MAKING CONNECTIONS. Connect all cables and peripheral devices to the proper ports of the IntelFlex Controller, as defined in the configuration sheet (when supplied). Connect the antenna to the BNC connector of the IntelFlex Controller. ALL CONNECTIONS MUST BE MADE BEFORE CONNECTING TO POWER (STEP 3).

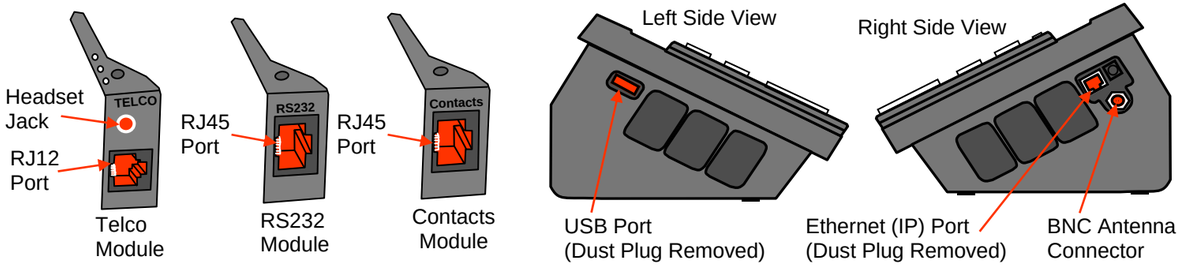

CONSULT THE INTELFLEX USER GUIDES FOR MORE DETAILED INSTRUCTION

3

APPLY POWER. Connect power to the IntelFlex Desktop Controller as shown below then connect the power cord to a 110V-240V AC outlet.

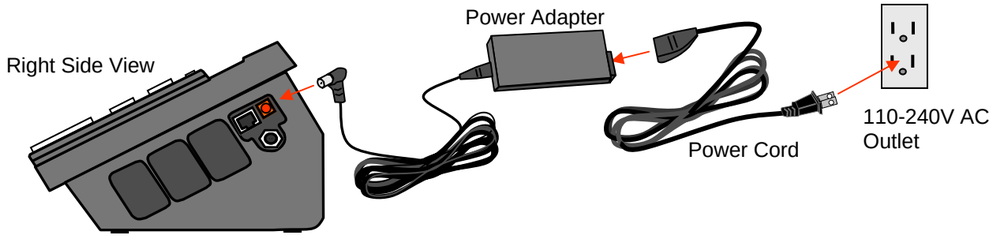

JTECH® Pagers & Chargers

1

PAGER INITIAL CHARGE. Set up the charger(s) on a counter or wall as desired and then install pagers. See your User Manual for more information. For best results, charge pagers at least 12 hours prior to initial use.

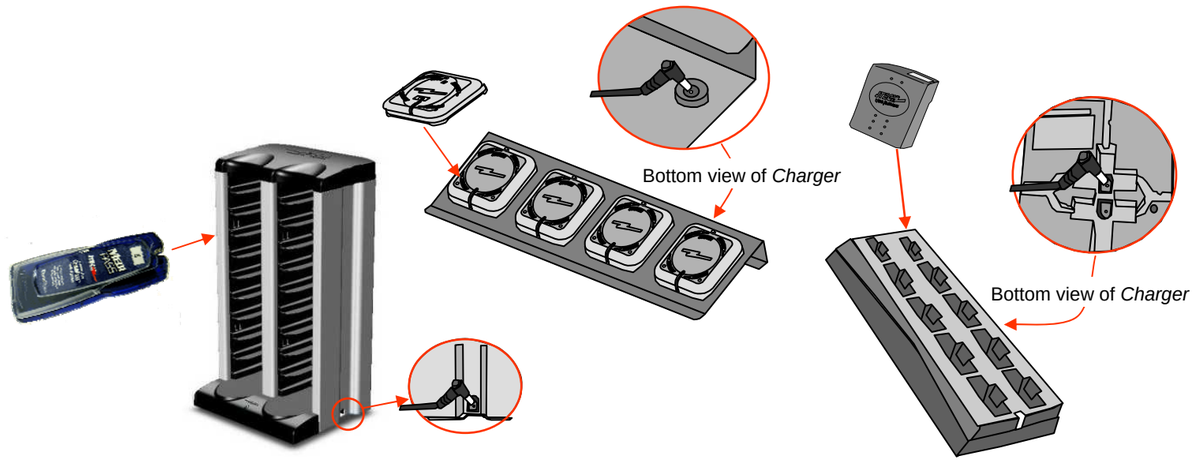

2

MAKING CONNECTIONS. Connect the power adapter to the charger as shown. If more than 1 charger is included in your system, consult you user manual for additional information.

3

APPLY POWER. Connect the power cable to the power adapter as shown and then to a 110-240V AC outlet.